



Preventive Maintenance Guide for all AGF Ladders

- Re-Tighten all bolts and nuts on the ladder inspected;
- Check wheel fixation bolts;
- If a bolt has to be replaced, it is very important to always use auto-locking nylon lock nut bolts;
- Check wear on the ladder leg caps and replace if necessary;
- Check all welding joints on the support platform and stairs;
- Check status of the warning and/or security labels on the ladder and replace if necessary;
- Check status of the ladders stabilizing legs;
- We can supply you with any part which has to be replaced on your AGF ladder.

Do not hesitate to contact us if you have any questions, 888-263-5993

WWW.AGFBROME.COM